



Alcatel

Alcatel One Touch 535	AL535	Alcatel One Touch 756	AL756
Alcatel One Touch 735	AL735	Alcatel One Touch 835	AL835
Alcatel One Touch 735i	AL735I		

BenQ-Siemens

BenQ-Siemens S68	BENQS68		
------------------	---------	--	--

Siemens

Siemens AX72	AX72	Siemens MC60	SIMC60
Siemens C60	SI60	Siemens S55	SIS55
Siemens C65	SIC65	Siemens S65	SIS65
Siemens CF62	SCF62	Siemens S68	BENQS68
Siemens CL75	SIEMENS75	Siemens SL55	SISL55
Siemens CX65	SICX65	Siemens SL65	SISL65
Siemens M55	SIM55	Siemens SX1	SI1
Siemens M65	SIM65		

Huawei

Huawei U1300	HUAWEI U1300		
--------------	--------------	--	--

LG

LG B2100	2100	LG KF755	KF755
LG C3100	LG3100	LG KG225	225
LG C3380	3380	LG KG320	320
LG F2400	2400	LG KG800	KG800
LG G7100	LG7100	LG KP235	KP235
LG KE800	KE800	LG KU990	KU990
LG KE850	KE PRADA	LG S5200	LG5200
LG KE970	KE970		

Motorola

Motorola C550	MO550	Motorola V360	360
Motorola C650	MO650	Motorola V535	MO535
Motorola E398	MO398	Motorola V547	V547
Motorola KRZR K1	KRAZOR	Motorola V600	MO600
Motorola L7	MO7	Motorola V8	LUX V8
Motorola RAZR V3	MO3	Motorola V80	MO80
Motorola RAZR V3i	MO3I	Motorola V9	MOTOROLA V9
Motorola U9	MOTO U9	Motorola W375	MO375
Motorola V220	MO220	Motorola Z8	MOTOROLA Z8



Nokia

Nokia 2610	2610	Nokia 6610	6610
Nokia 2630	2630	Nokia 6610i	6610I
Nokia 2650	2650	Nokia 6630	6630
Nokia 2680	2680	Nokia 6670	6670
Nokia 2760	2760	Nokia 6680	6680
Nokia 3100	3100	Nokia 6800	6800
Nokia 3120	3120	Nokia 6810	6810
Nokia 3200	3200	Nokia 6820	6820
Nokia 3220	3220	Nokia 6822	6822
Nokia 3230	3230	Nokia 7200	7200
Nokia 3250	3250	Nokia 7210	7210
Nokia 3300	3300	Nokia 7250	7250
Nokia 3510i	3510	Nokia 7250i	7250I
Nokia 3650	3650	Nokia 7260	7260
Nokia 3660	3660	Nokia 7270	7270
Nokia 5100	5100	Nokia 7280	7280
Nokia 5140	5140	Nokia 7360	7360
Nokia 5140i	5140I	Nokia 7370	7370
Nokia 5200	N5200	Nokia 7373	7373
Nokia 5300	5300	Nokia 7380	7380
Nokia 5310	5310	Nokia 7390	7390
Nokia 5500	5500	Nokia 7600	7600
Nokia 5610	5610	Nokia 7650	7650
Nokia 6020	6020	Nokia 7710	7710
Nokia 6021	6021	Nokia 8800	8800
Nokia 6060	N6060	Nokia 8910i	8910
Nokia 6070	6070	Nokia 9300	9300
Nokia 6086	6086	Nokia 9500	9500
Nokia 6100	6100	Nokia E50	E50
Nokia 6101	6101	Nokia E51	E51
Nokia 6103	6103	Nokia E60	E60
Nokia 6110	6110	Nokia E65	E65
Nokia 6111	6111	Nokia E66	E66
Nokia 6120	6120	Nokia E90	E90
Nokia 6125	6125	Nokia N70	70
Nokia 6131	6131	Nokia N73	73
Nokia 6151	6151	Nokia N79	N79
Nokia 6170	6170	Nokia N80	N80
Nokia 6220	6220	Nokia N82	NOKIAN82
Nokia 6230	6230	Nokia N85	N85
Nokia 6230i	6230I	Nokia N90	90
Nokia 6233	6233	Nokia N91	N91
Nokia 6280	6280	Nokia N95-1	95
Nokia 6300	6300	Nokia N96	N96
Nokia 6500	6500	Nokia N-Gage	GAGE
Nokia 6600	6600	Nokia N-GageQD	GAGEQD
Nokia 6600 fold	6600 NOKIA		



Samsung

Samsung i780	I780	Samsung E760	E760
Samsung E330N	SAE330N	Samsung F300	SAF300
Samsung D500	D500	Samsung U600	SAMSUNG600
Samsung D500E	500E	Samsung X300	SA300
Samsung E370	370	Samsung X480	SA480
Samsung F330	F330	Samsung X670	670
Samsung F480	480	Samsung U700	SAMSUNG U700
Samsung J700	J700	Samsung U900	SAMSUNG U900
Samsung L700	L700	Samsung X640	SA640
Samsung M110	M110	Samsung X660	660
Samsung D820	SAMSUNG820	Samsung X820	SAMSUNGSGHX820
Samsung D900	SAMSUNG900	Samsung X830	SAMSUNGSGHX830
Samsung E330	SA330	Samsung i200	I200
Samsung E360	E360	Samsung I8510	I8510
Samsung E700	SA700	Samsung D600E	600E

SonyEricsson

SonyEricsson C702i	C 702 SONY ERICSSON	SonyEricsson T68i	E68
SonyEricsson C902i	C902	SonyEricsson W200i	SE W200I
SonyEricsson C905	C905	SonyEricsson W300i	300I
SonyEricsson K300i	E300I	SonyEricsson W350i	SE W350I
SonyEricsson K500i	E500	SonyEricsson W550c	EW550I
SonyEricsson K508i	E508	SonyEricsson W595	SONY ERICSSON W595
SonyEricsson K510i	510	SonyEricsson W610i	EW610I
SonyEricsson K550i	K550	SonyEricsson W660i	660I
SonyEricsson K660i	K660	SonyEricsson W710i	EW710I
SonyEricsson K700i	E700	SonyEricsson W760i	SONY ERICSSON W760
SonyEricsson K750i	E750	SonyEricsson W800i	800I
SonyEricsson K790i	790	SonyEricsson W810i	SEW810
SonyEricsson K810i	K810	SonyEricsson W850i	850I
SonyEricsson K850i	850	SonyEricsson W880i	880I
SonyEricsson P1i	P1	SonyEricsson W890i	890
SonyEricsson P800	E800	SonyEricsson W902	SE W902
SonyEricsson P900	E900	SonyEricsson W910i	EW910I
SonyEricsson P910i	E910	SonyEricsson XPERIA X1	SE X1
SonyEricsson P990i	P990	SonyEricsson Z300i	SEZ300I
SonyEricsson S700i	ES700	SonyEricsson Z310i	310I
SonyEricsson T230	E230	SonyEricsson Z520i	EZ520
SonyEricsson T290i	ET290	SonyEricsson Z530i	530I
SonyEricsson T300	E300	SonyEricsson Z600	E600
SonyEricsson T310	E310	SonyEricsson Z610i	EZ610
SonyEricsson T610	E610	SonyEricsson Z710i	EZ710
SonyEricsson T630	E630	SonyEricsson Z770i	SE Z770I
SonyEricsson T650i	ET650I		